

PRODUCT INFORMATION



MAGNETOSCOPE® 1.070

PORTABLE MAGNETOMETER



proof.

FEATURES

- Portable, microprocessor controlled magnetometer system
- Probes for the measurement of the magnetic flux density as absolute or gradient value
- Probes for determination of the relative magnetic permeability μ_r in accordance with IEC 60404-15 und ASTM A342/A342M
- USB interface for data transfer
- SD card for storage of measurement data and parameters
- Peak value detection and storage
- Adjustable limits for threshold values
- Visual and acoustic alarm
- Single or batch measurement
- Editable measuring- and test procedures including graphical operator assistance
- Battery or mains operated
- PC software for data analysis and report generation

MEASUREMENT METHOD

- Fluxgates,
Direction dependent, with maximal sensitivity along the sensor axis
- Hall-sensors

APPLICATIONS

- Long term monitoring of magnetic environmental conditions, e.g. prior to installation of magnetic sensitive devices e.g. MRI systems
- Testing of feebly magnetic materials and machined components for magnetic remanence
- Detection of ferrous inclusions in austenitic steels and nonferrous alloys
- Determination of relative magnetic permeability as part of the quality inspection for austenitic steels and feebly magnetic / nonmagnetic alloys
- Verify material changes caused by carburization, corrosion, coating reduction or micro structural alteration by permeability comparative measurement

COMPONENTS

The measuring instrument as well as the probes are calibrated. They are delivered with a calibration certificate. The device and calibration parameters are electronically stored in the respective component.

The measuring instrument automatically recognizes the probes, when it is connected.

MEASURING INSTRUMENT MAGNETOSCOPE 1.070



- Compact, lightweight measuring instrument
- 3,5" color display
- Clear menu structure for operator guidance
- Data logging function
- Connection of 1-axis-magnetic field sensor, 3-axis-magnetic field sensors as an option
- Connection of permeability probes
- Trigger input
- Temperature measuring channel
- USB, mini USB and SD card interfaces
- Power supply by batteries, battery pack or mains adapter

PROBE PD-100-100



- Differential probe with 100 mm sensor distance
- 1 nT to 100 μ T measuring range
- For detection of larger local magnetic field anomalies
- Compensation of the earth magnetic field or large disturbances caused by anomalies at bigger distance
- Orientation dependency when moving in the earth magnetic field: < 50 nT

PROBE PD-100-20



- Differential probe with 20 mm sensor distance
- 10 nT to 100 μ T measuring range
- For detection of smaller local magnetic field anomalies
- Detection of locally limited remanences
- Compensation of the earth magnetic field or large disturbances caused by anomalies at bigger distance
- Orientation dependency when moving in the earth magnetic field: < 100 nT

PROBE PFD-100



- Probe pair for the optional arrangement as an absolute or differential probe- with variable sensor element distance
- 1 nT to 100 μ T / 200 μ T measuring range by absolute or differential arrangement
- Determination of magnetic remanence of single components, whereby the probe has to be in a fixed position and compensated to zero
- When using differential arrangement with parallel arranged sensor elements: compensation of the earth magnetic field or bigger disturbances from the distant field
- Nonmagnetic probe mount – as an option

PROBE PF-1000



- Probe for determination of absolute magnetic field
- 10 nT to 1 mT measuring range
- Sensor elements are installed parallel in axial direction of the probe housing
- Determination of magnetic fields (orientation and value)
- Determination of magnetic remanence of single components, whereby the probe has to be in a fixed position and compensated to zero

PROBE PP-2-5



- Probe for the determination of the relative magnetic permeability μ_r on semi-finished products and components
- Measuring range μ_r 1,00000 to 2,00000
- „Permeability Meter“ method according to IEC 60404-15 or „Flux Distortion Method“ according to ASTM A342/A342M, method 4
- Calibrated traceable to national standards (PTB-Braunschweig), measured in accordance with IEC 60404-15“Solenoid / magnetic moment“ Method, ASTM A342/A342M Method 1, H=30 kA/m

PROBE PP-2-2



- Miniaturized probe for measurement of effects correlated to magnetic permeability, e.g. coating thickness, carburization layer thickness, corrosion effects
- The probe size is optimized for measurement of small components and complex shaped design.
- The probe is not designed for the determination of the relative magnetic permeability μ_r traceable to national standards.


PROBE PP-2-2-R



- PP-2-2 –R with 90° angled sensor head.

MAGDATA® TRANSFER-SOFTWARE


Software for the communication between PC and MAGNETOSCOP.

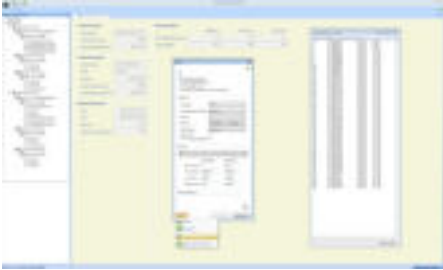

- Loading of measuring data from the MAGNETOSCOP
- Converting of measurement data set in different formats (.txt, .csv, .xml, .tdm [LabVIEW™]....)
- Loading of software-updates on the MAGNETOSCOP


MAGDATA® VIEW-SOFTWARE

Comprehensive software for visualization of measuring data – up to 16 channels per chart.

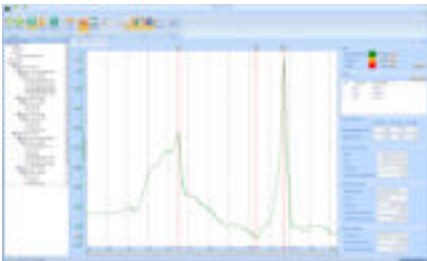

- Data selection and reduction
- Visualization of measuring data (oscilloscope, list of values...)
- Processing of dynamic measurement methods including trigger information (time, distance)
- Statistical evaluation of measurement series
- Report generation and printing
- Creation of templates for measuring and testing procedures and transfer to the MAGNETOSCOP

MAGDATA® HOTSPOT-SOFTWARE

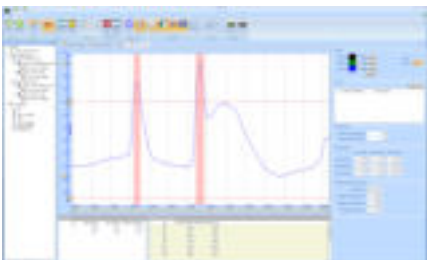


- Data selection and reduction
- Visualization of measuring data (oscilloscope, list of values...)
- Processing of dynamic measurement methods including trigger information (time, distance)
- Processing of reference measurements for Offset-compensation
- Definition and display of treshold values, highlighting of magnetic anomalies
- Report generation according to API Spec 7

TECHNICAL SPECIFICATION


Measuring range	0,1 nT to 1 mT μ_r 1,00000 to 2,00000
Resolution	24 Bit ADC
Measurement uncertainty, field measurement	1,5% of the measuring range
Measurement uncertainty, permeability measurement	5% of the measured value
Ambient temperature	0 to +40 °C
Protection grade	IP 54
Dimensions measuring instrument	212 x 102 x 41 mm (L x W x H)
Display size	3,5"
Weight - measuring instrument incl. batteries	0,62 kg
Battery type	4 pcs. Mignon, AA, LR6 Alkaline or NiMH

PROBE DIMENSIONS AND POSITION OF THE SENSORS


PD-100-100

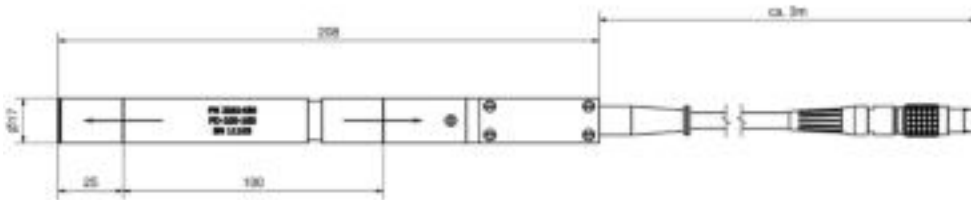

PD-100-20

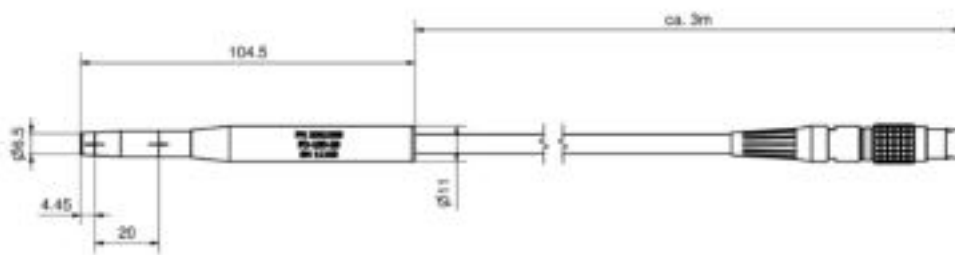


PFD-100

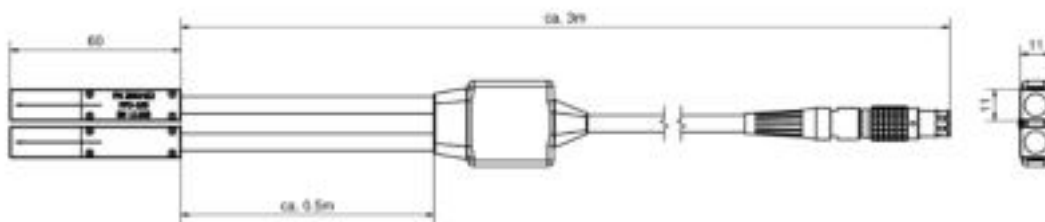


PF-1000




PP-2-5

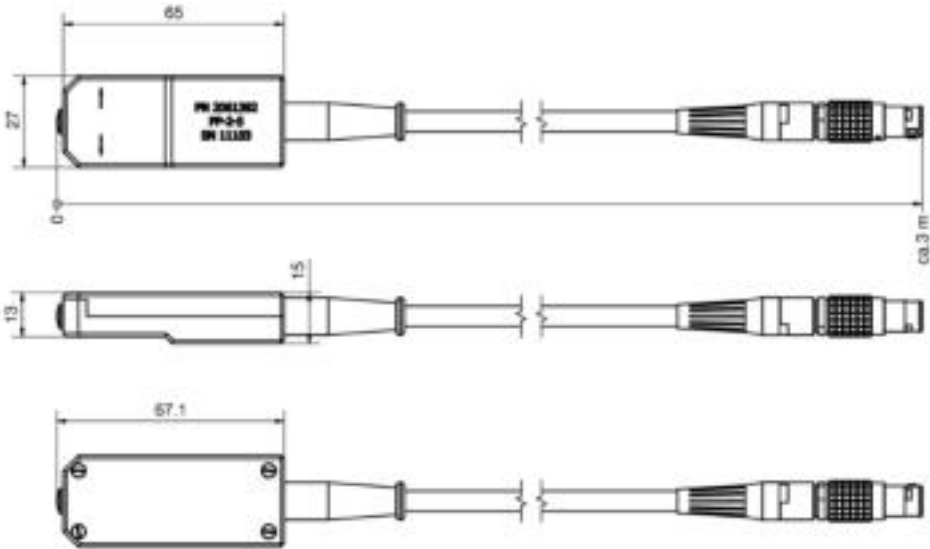

PP-2-2

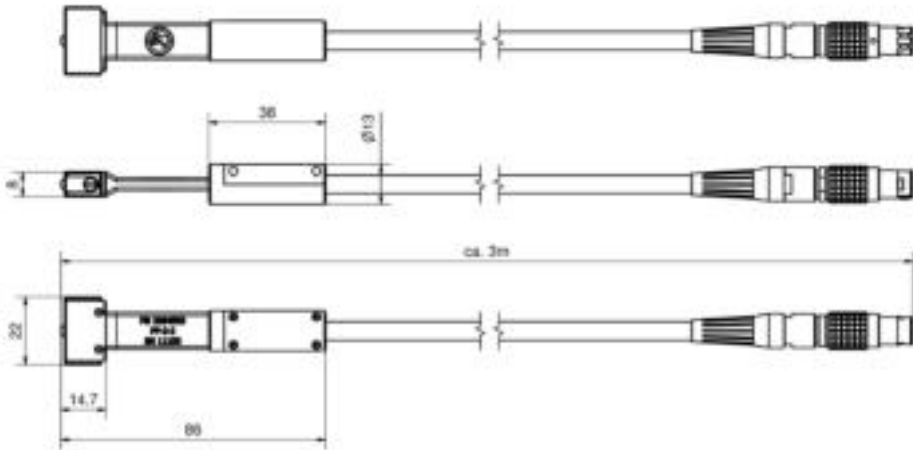

PP-2-2-R

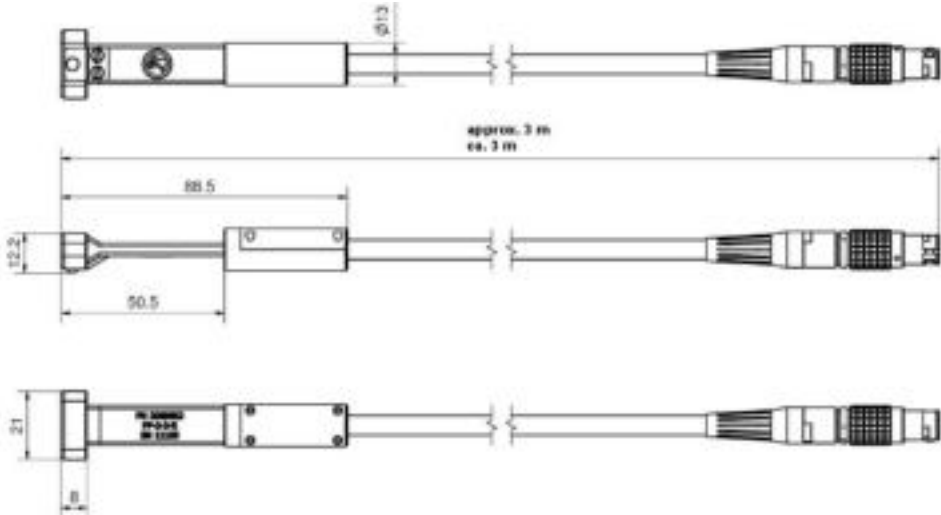

STANDARD KITS

MAGNETOSCOPE 1.070 – FIELD- AND DIFFERENTIAL MEASUREMENT

- Basic equipment
- Measuring instrument MAGNETOSCOPE 1.070
 - Transport case
 - Mains adapter
 - MAGDATA TRANSFER software
 - USB cable
 - 4 batteries

Probe PFD-100

Probe mount

MAGNETOSCOPE 1.070 – FIELD MEASUREMENT

Basic equipment

Probe PF-1000

MAGNETOSCOPE 1.070 – DIFFERENTIAL MEASUREMENT – 20 MM

Basic equipment

Probe PD-100-20

MAGNETOSCOPE 1.070 – DIFFERENTIAL MEASUREMENT – 100 MM

Basic equipment

Probe PD-100-100

MAGNETOSCOPE 1.070 – PERMEABILITY MEASUREMENT

Basic equipment

Probe PP-2-5

Reference standard μ_r 1.05

Adapter

ACCESSORIES

POWER SUPPLY

Mains adapter	5 VDC, 2.4 A, 100 – 240 VAC
Battery	NiMH 1.2 V, Mignon, AA, HR6, 2.850 mAh
Battery charger for NiMH batteries	100 – 240 VAC, 50/60 Hz
Battery pack (external)	5 VDC, 2.4 A, 10.000 mAh
Battery charger for external battery pack	5 VDC, 2.2 A, 100 – 240 VAC, 50/60 Hz

CABLES

Trigger cable	5 m long
Extension cables - probes	5 / 15 m

REFERENCE STANDARDS

Reference standard	μ_r 1.005/ 1.025/ 1.05/ 1.2 for probe PP-2-5, calibrated traceable to national standards (PTB-Braunschweig), measured in accordance with IEC 60404-15 "Solenoid / magnetic moment" Method, ASTM A342/A342M Method 1, H=30 kA/m
Reference standard	For probes PP-2-2 and PP-2-2-R
Adapter for precise probe centering on the reference standard	3 types, for probes PP-2-5 / PP-2-2 / PP-2-2-R

SOFTWARE

MAGDATA® Transfer	System requirements: 32 / 64 bit OS Windows 7 or higher
MAGDATA® View	
MAGDATA® Hotspot	

MISCELLANEOUS

Carrying bag	For measuring instrument and external battery pack
Belt pouch	For external battery pack

IMPRINT



Institut Dr. Foerster GmbH & Co. KG

Division Detection-Systems & Magnetics
In Laisen 70
72766 Reutlingen
Germany

t +49 7121 140-312
f +49 7121 140-280
dm@foerstergroup.de

MAGNETOSCOP® 1.070
Order number: 208 130 0
Edition: 09/2016

Subject to change.

® Registered Trademark

© Copyright FOERSTER 2016

fluxgate-magnetometer.com

Brand names:

LabVIEW™ is a trademark of National Instruments

Microsoft® Windows® is a registered trademark of Microsoft Corporation